

Programmable Timer

Starting Instructions

1. Restarting Timer
 - a. First time users, press the reset button, labeled “C” on timer.
2. Lock mode
 - a. The timer will automatically lock after 15 seconds of inactivity.
 - b. An “a” in the lower left-hand area of the LCD, indicates the timer is locked.
 - c. To unlock, simply press the C/R button 4 times in succession.
 - d. The timer is now unlocked and ready for programming.
3. Setting the current time
 - a. Press the button labeled with the clock logo to set the current time. Use the “D +, H +, and M +” labeled buttons to set the current time.
 - b. The entered time it will automatically save. No additional action is required to save the current time.
 - c. To re-do the time, repeat steps 2 and 3 above.

Operating Mode

The timer has 3 modes, On, Off, and Auto. Toggle through each mode using the MANUAL button. The LCD will indicate the current mode.


- On - the connected device will run regardless of programming.
- Off - the connected device will be off.
- Auto - the connected device will run according to programmed on off times.

Programming Basics

- A maximum of 28 “on/off” times can be programmed on a typical day
- Use the D + button to scroll through 16 different “day scenarios” or combinations of the days of the week. For example, weekends only, weekdays only, every day or only a single day.
- The default “day” setting is every day. It is not necessary to press the D + button for this scenario.
- While in programming mode, the MANUAL button can be used to set “seconds”.

Programming Instructions

1. Unlock the timer if necessary.
2. Press the P in circle button to enter programming mode. Use the H + and M + buttons to set the “on” time.
3. Press the P in circle button. Use the H + and M + buttons to set the “off” time.
4. Multiple “on/off” times can be programmed for each or every day of the week. Press the P in circle button to add additional times.
5. Press the D + button to choose the “day scenario” mentioned above.
6. Press the clock icon button to save and exit. The timer will save the settings and exit programming mode after a period of inactivity.

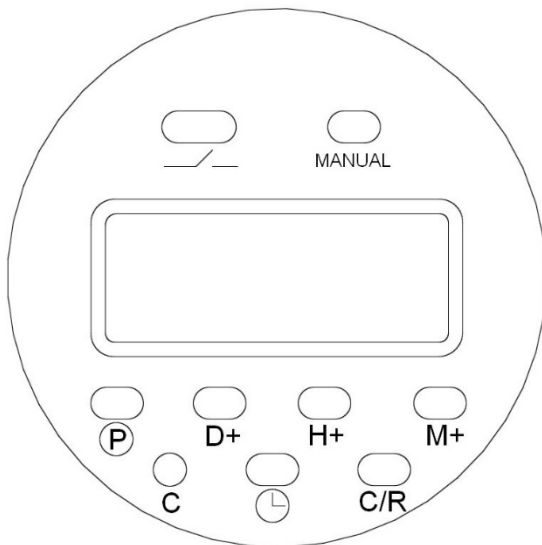

P in circle	=	Program Timer
D +	=	Day Add
H +	=	Hour Add
M +	=	Minute Add
MANUAL	=	Second Add
Clock icon	=	View Time
C	=	Restore Defaults
MANUAL	=	Choose Mode
C/R	=	Unlock